


CHR0750E / CHR1500E

POWER SUPPLY ADAPTOR


EN	Power supply adaptor	3
DE	Netzteiladapter	5
FR	Adaptateur	8
ES	Adaptador de alimentación	11
PT	Adaptador da alimentação	14
IT	Unità di alimentazione	17
NL	Voedingsadapter	20
DK	Strømforsyningsadapter	23
SE	Nätadapter	26
FI	Virtalähdesovitin	28
NO	Strømforsyningsadapter	30
RU	Адаптер питания	32
PL	Przejściówka zasilacza	35
CZ	Napájecí adaptér	38
SK	Napájací adaptér	40
HU	Tápegység adapter	43
RO	Adaptor de alimentare	46
SL	Napajalnik	49
LT	Maitinimo adapteris	51
LV	Barošanas adapteris	54
GR	Προσαρμογέας τροφοδοσίας	57
TR	Güç kaynağı adaptörü	60
ET	Toiteadapter	62
UK	Адаптер живлення	64
BG	Захранващ адаптер	67
HR	Adapter napajanja	70
KA	კვების ბლოკის ადაპტერი	72
SR	Adapter izvora napajanja	75
BS	Strujni adapter	77
HE	מתאם ספק מתח	83
AR	مهايئ مصدر الطاقة	81

MNL_EGO_CHR0750E / CHR1500E_EV01.31_251102

A

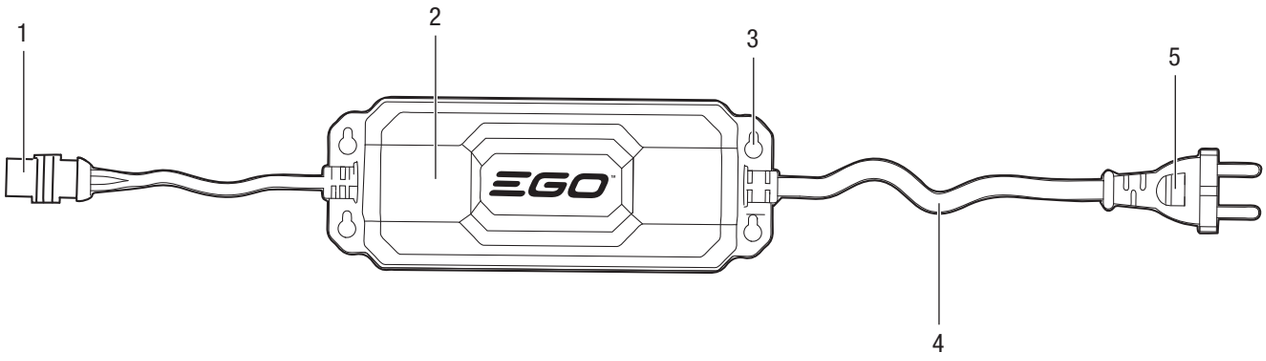

B

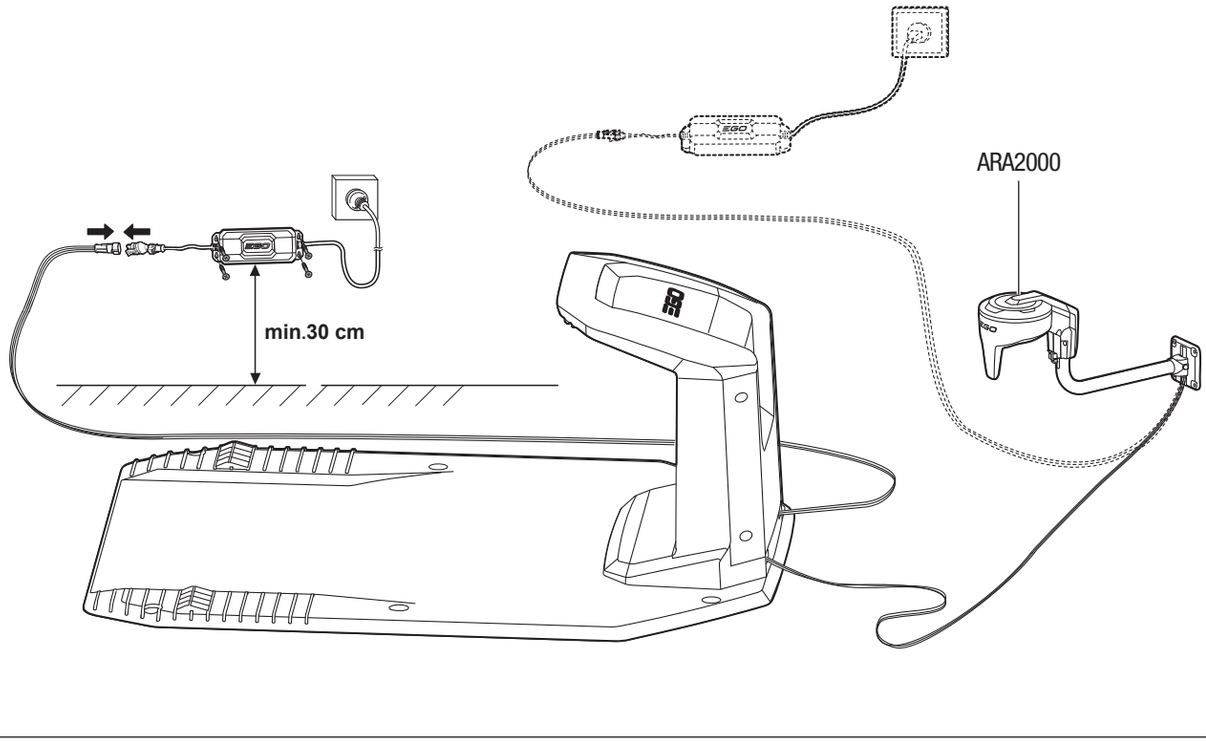

EGO Europe GmbH
Autenbachstraße 11, 71711 Steinheim an der Murr, Germany

Chervon Europe Ltd
The Anchorage, 34 Bridge Street Reading, RG1 2LU, United Kingdom

EN

READ ALL INSTRUCTIONS!

⚠ **WARNING:** Be sure to read and understand all safety instructions in this Operator's Manual, including all safety alert symbols such as "**DANGER**", "**WARNING**" and "**CAUTION**" before using this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

⚠ **WARNING:** To ensure safety and reliability, all repairs should be performed by a qualified service technician.

SAFETY INSTRUCTIONS

WORK AREA SAFETY

- **Keep the work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate appliances in explosive environments, such as in the presence of flammable liquids, gases, or dust.** Appliances create sparks, which may ignite the dust or fumes.

ELECTRICAL SAFETY

- **Avoid body contact with grounded surfaces,** such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is grounded.
- **Appliance plugs must match the outlet.** Never modify the plug in any way. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- **Do not expose appliances to rain or wet conditions.** Water entering an appliance will increase the risk of electric shock.
- **Do not abuse the cord.** Never use the cord for carrying, pulling, or unplugging the appliance. Keep the cord away from heat, oil, sharp edges, or moving parts. Damaged or entangled cords increase the risk of electric shock.

SERVICE

- **Have your appliance serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the appliance is maintained.
- **When servicing an appliance, use only identical replacement parts. Follow instructions in the maintenance section of this manual.** Use of unauthorized parts or failure to follow maintenance instructions may create a risk of shock or injury.


SAFETY INSTRUCTIONS FOR POWER SUPPLY ADAPTOR

- Please read the Operator's Manual of EGO ROBOTIC LAWN MOWER RMR1500E/RMR3000E/RMR6000E carefully and make sure you understand the instructions before using the power supply adaptor.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use power supply, including the power supply plug and terminals with wet hands.
- **Use of an attachment not recommended or sold by the power supply manufacturer may result in a risk of fire, electric shock, or injury to persons.**
- **Make sure that the cord is located so that it will not be stepped on, tripped over, come in contact with sharp edges or moving parts, or otherwise be subjected to damage or stress.** This will reduce the risk of accidental falls, which could cause injury and damage to the cord, which could then result in electric shock.
- **Keep the cord from heat to prevent damage to housing or internal parts.**
- **Do not allow gasoline, oils, petroleum-based products, etc. to come in contact with plastic parts.** These materials contain chemicals that can damage, weaken, or destroy plastic.
- **Do not use the power supply with a damaged cord or plug, which could cause shorting and electric shock.** If damaged, have the power supply repaired or replaced by an authorized service technician at an EGO Service Center.
- **Do not use the power supply if it has received a sharp blow, been dropped, or has otherwise been damaged in any way.** Take it to an authorized service technician for an electrical check to determine if the power supply is in good working order.
- **Do not disassemble the power supply.** Take it to an authorized service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- **Unplug the power supply from the power outlet before attempting any maintenance or cleaning to reduce the risk of electric shock.**
- **Disconnect power supply from the power outlet when not in use.** This will reduce the risk of electric shock or damage to the power supply if metal items should fall into the opening. It will also help prevent damage to the power supply during a power surge.
- **Risk of electric shock.** Do not touch the uninsulated portion of output connector or uninsulated terminal.
- **To reduce the risk of injury, close supervision is necessary when an appliance is used near children.**
- **To reduce the risk of electrical shock, do not put power supply in water or other liquid.** Do not place or store appliance where it can fall or be pulled into a tub or sink.
- When you connect the power supply to the power outlet, use a residual-current device (RCD) with a tripping current of maximum 30 mA.
- Do not put power supply cable in the work area, which can cause damage to the cable.
- If there is a risk of thunderstorm, we recommend that the power supply to the charging station is disconnected to decrease the risk of damage to electrical components. Connect the power cable again if there is no longer a risk of thunderstorm.
- Do not put the power supply at a height where there is a risk it can be submerged in water. Do not put the power supply on the ground. Do not encapsulate the power supply. Condensed water can harm the power supply and increase the risk of electrical shock.

SAVE THESE INSTRUCTIONS!

EN

SAFETY SYMBOLS

	Safety Alert
	Read & Understand operator's manual (power supply adaptor)
	Read & Understand operator's manual (charging station)
	Time-lag miniature fuse-link (CHR0750E)
	Time-lag miniature fuse-link (CHR1500E)
	SMPS incorporating a short-circuit-proof safety isolating transformer (inherently or non-inherently)
	SMPS (Switch mode power supply unit)
	Class II Construction
	Designed to be supplied from a separated extra-low voltage (SELV) power source
CE	This product is in accordance with applicable EC directives.
UK CA	This product is in accordance with applicable UK legislation.
	Waste electrical products should not be disposed of with household waste. Take to an authorized recycler.
IP66	Protected from total dust ingress and from high-pressure water jets from any direction
⎓	Direct Current
V	Voltage
W	Walt
Hz	Hertz
A	Amperes
kg	Kilogram

PACKING LIST (FIG. A)

DESCRIPTION

Know Your Power Supply Adaptor (Fig. A)

1. Connector
2. AC Adaptor
3. Wall-mount Hole
4. Power Cord
5. Plug

SPECIFICATIONS

Power Supply Adaptor

IP-classification	IP66
Input	100-240V~ 50-60Hz 2A max
Output (CHR0750E)	2.4A 28V d.c. 67.2W
Output (CHR1500E)	4.8A 28V d.c. 134.4W
Recommended operating temperature	0°C – 40°C

Charging Station (with CHR0750E, CHR1500E)

IP-classification	IP66
Input	18-28V d.c.
Output	18-28V d.c. 0.6W

OPERATION

The power supply adapter CHR0750E is designed exclusively for EGO ROBOTIC LAWN MOWER RMR1500E/RMR3000E.

The power supply adapter CHR1500E is designed exclusively for EGO ROBOTIC LAWN MOWER RMR6000E.

The CHARGING STATION is only to be used with the power supply adapter CHR0750E or CHR1500E.

Power supply adapter CHR0750E or CHR1500E can also provide power for RTK antenna ARA2000.

Using the Power Supply Adaptor (Fig. B)

1. Connect the connector of the power supply adaptor to the connector of low-voltage cable.
2. Install the power supply adaptor at a minimum height of 30 cm.
3. Connect the low-voltage cable to the charging station or the RTK antenna. Refer to the operator's manual of EGO ROBOTIC LAWN MOWER RMR1500E/RMR3000E/RMR6000E and EGO RTK antenna ARA2000.
4. Connect the plug of the power supply adaptor to a 100-240 V~ power outlet.

MAINTENANCE

Cleaning the Product

⚠ **WARNING:** Never use solvents for cleaning. If necessary, use a moist cloth to clean the product.

Protecting the Environment



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

WARRANTY

EGO WARRANTY POLICY

Please visit the website **egopowerplus.eu** for full terms and conditions of the EGO Warranty policy.